


## Removal

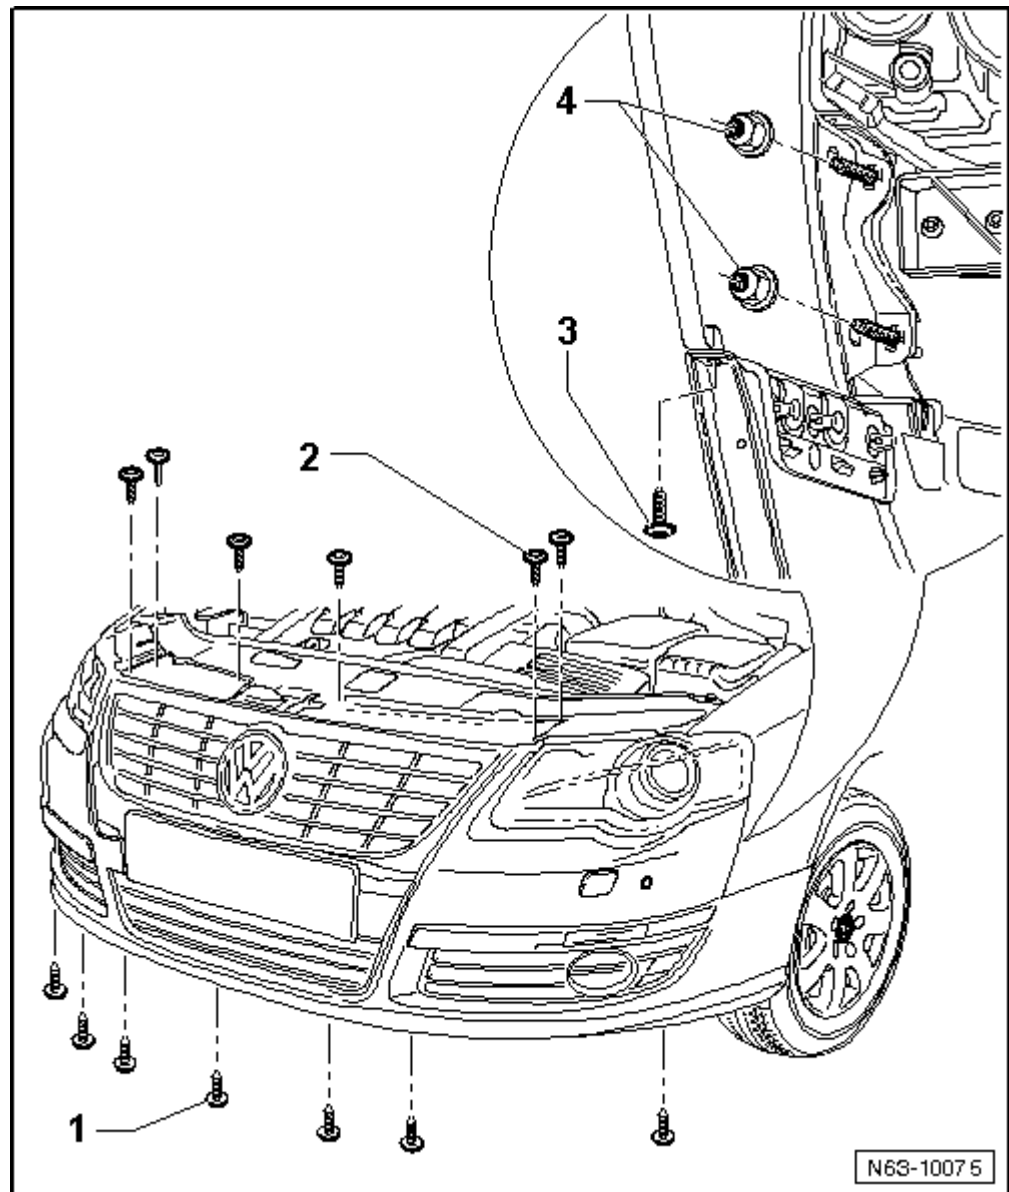

- Remove front wheel housing linings on left and right → [Chapter](#).
- Unscrew bolts -2- from above out of lock carrier.
- Remove bolts -1- from below.
- Remove bolts -3- (point upwards) on left and right.
- Remove hexagon nuts -4- on inside of wing on left and right.

Further dismantling is possible only with the help of a second mechanic.

- With the help of a second mechanic, pull out bumper cover in parallel motion from wing mountings.
- Disconnect all electrical connections from electrical components and separate hoses.