

## Removing and installing backrest




### Note


The split backrest is shown as an example.

### Removing


- If fitted, remove variable luggage compartment floor -1-.
- Remove bench seat → Chapter.

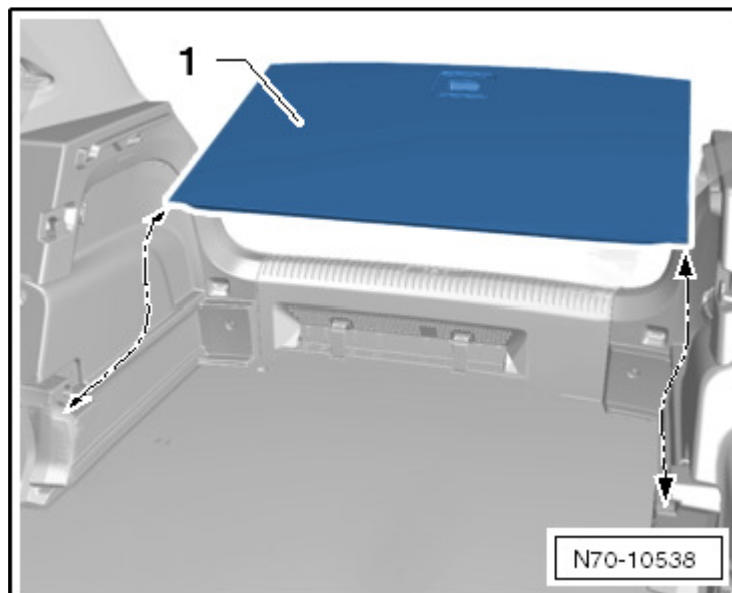


- Unscrew bolt -1- (40 Nm) and swing belt buckle forwards.
- Fold backrest halves forwards.

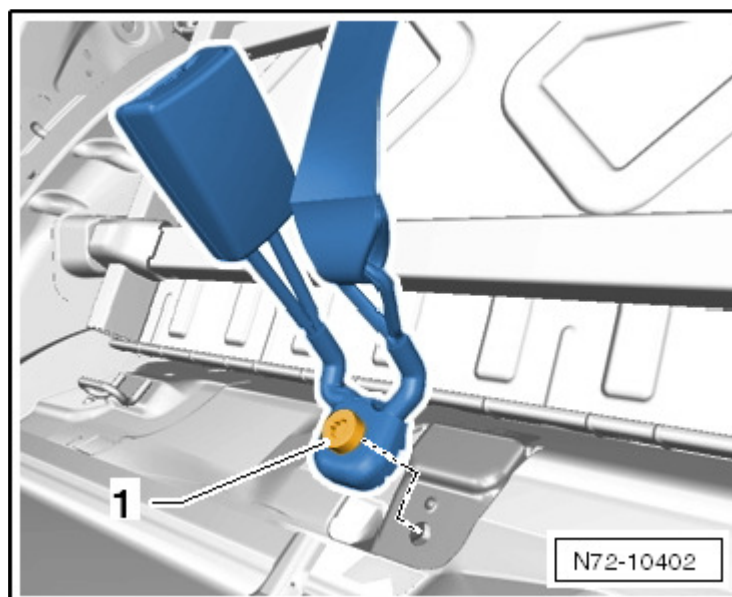

- Backrest central bearing -2- is equipped with a cover cap. Pull lateral legs of cover cap outwards and release cover cap from backrest central bearing.
- Unscrew bolt -1- (8 Nm) and remove clamp -3- from backrest central bearing -2-.

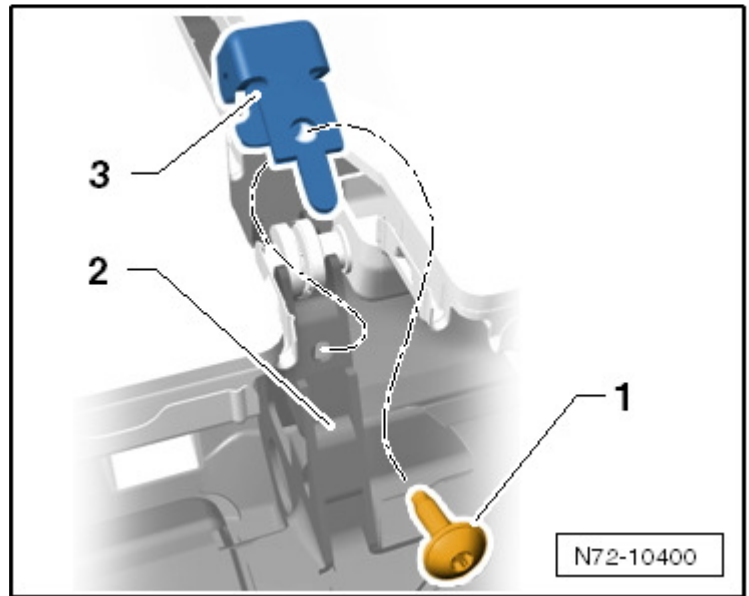

- On both sides, release locking hooks -1- with a screwdriver counter to direction of travel -arrow-.
- Remove left backrest -3- from outer backrest bearing and centre backrest bearing -2-.
- Remove right backrest -4- from outer backrest bearing -5- and centre backrest bearing -2-.

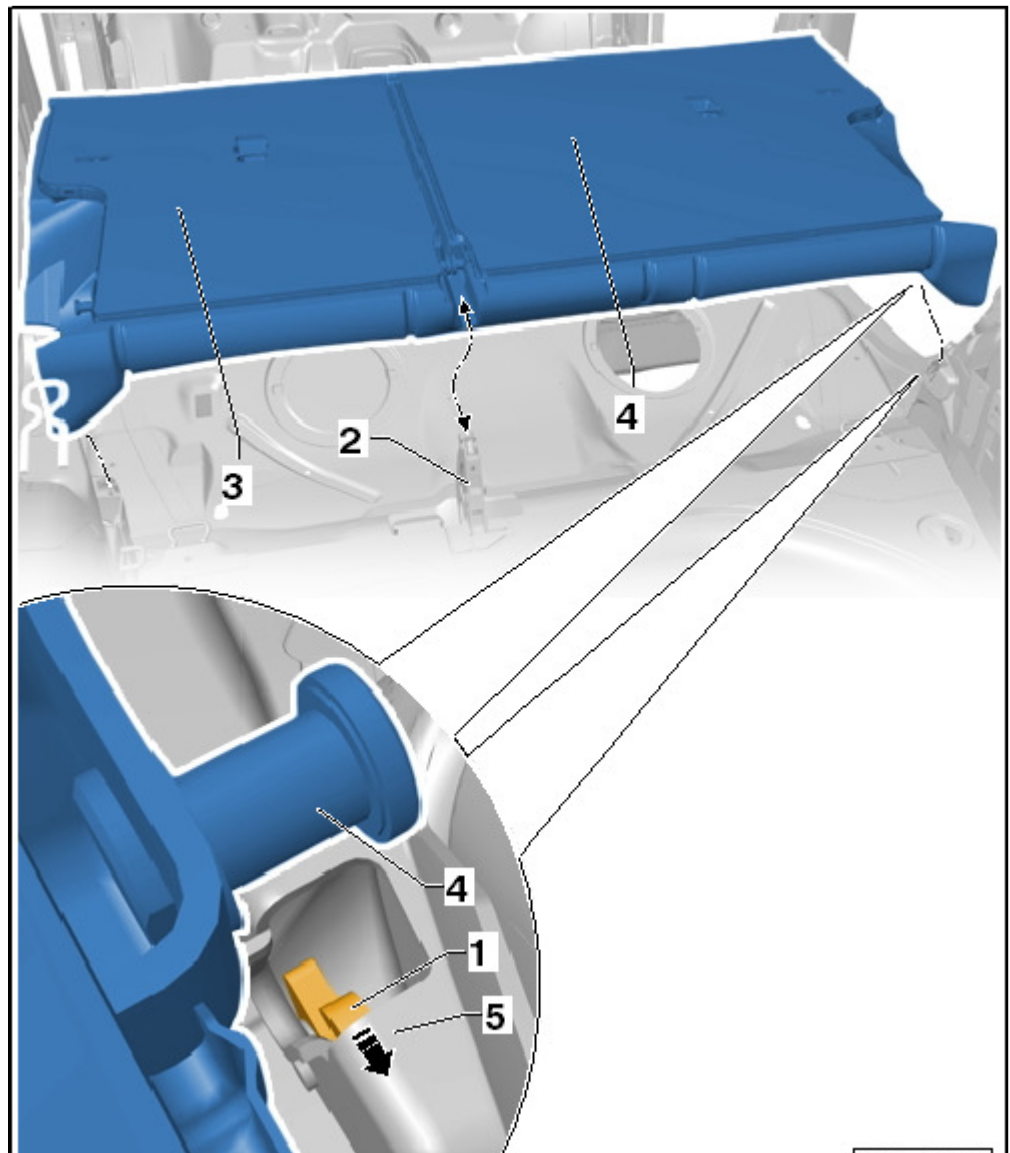

## Installing

- Install in reverse order of removal.



### Note

*Assembly sequence: Insert right backrest into outer and centre backrest bearings. Then insert left backrest into backrest bearings.*

- In outer backrest bearings, locking hooks must be locked with a screwdriver in direction of travel.



### WARNING

***Carry out a functional check after assembly!***

- Engage backrest in lock.
- Red seat backrest locking mechanism marking must not be visible!
- Check locking by pulling on upper backrest surface.
- Release backrest and fold forwards.
- Red seat backrest locking mechanism marking must be visible!
- Engage backrest in lock again.