



Removing and installing moulded headliner (4-door models)

Removing


- Remove front interior and reading light → [Electrical system](#); [Rep. Gr.96](#).
- Remove lights for make-up mirrors → [Electrical system](#); [Rep. Gr.96](#).
- Remove rear interior light -W43- → [Electrical system](#); [Rep. Gr.96](#).
- Remove sun visors → [Chapter](#).
- Remove interior mirror:
 - ◆ Interior mirror without rain and light sensor -G397- → [Chapter](#).
 - ◆ Interior mirror with rain and light sensor -G397- → [Chapter](#).
- Remove upper A-pillar trims → [Chapter](#).
- Remove roof grab handles → [Chapter](#).
- Release upper B-pillar trims from mountings (4-door models) → [Chapter](#).
- Remove roof frame trim → [Chapter](#).
- Fold bench seat forwards.
- In vehicles with interior monitoring, unscrew bolts -1- and -2- (3 Nm).

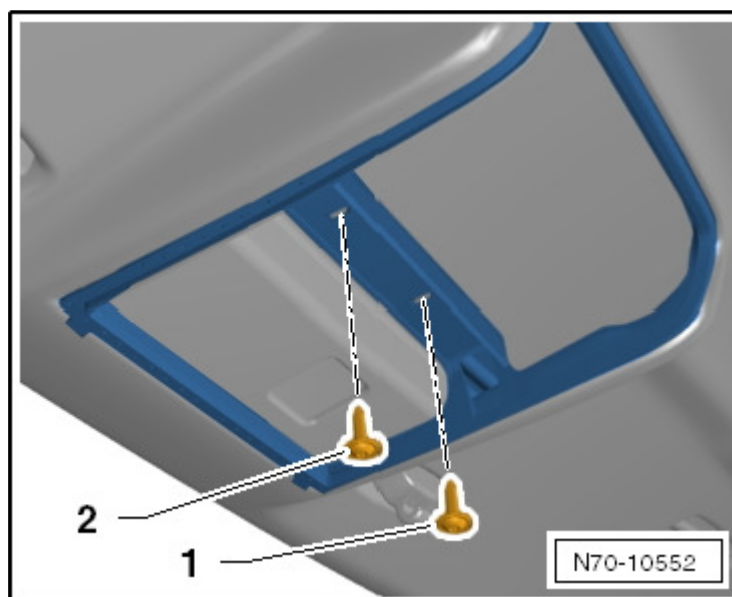


- Remove retaining clip -1- beneath roof frame trim.

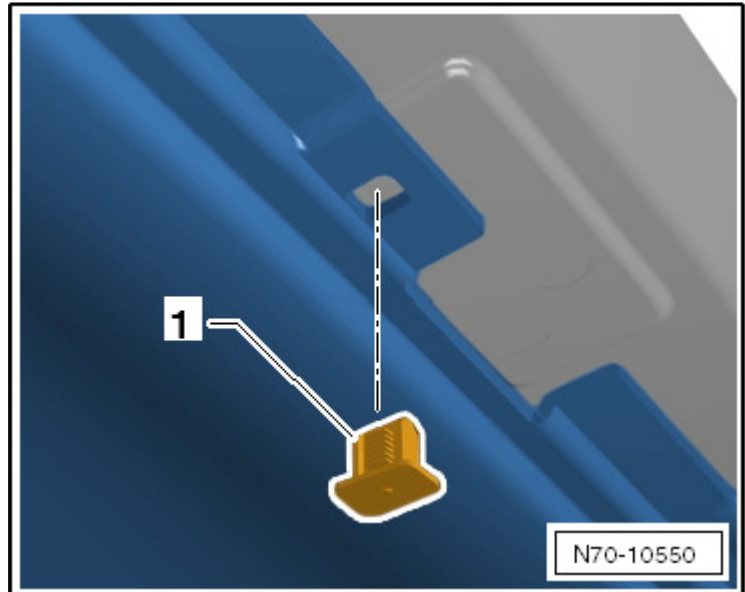

- Unclip cover caps -1- and -4- with removal wedge -3409- and remove inner sun visor bearings -2- and -3-.
- Lower moulded headliner with the help of a second mechanic (danger of breakage) and pull out from C-pillar trim in direction of travel.

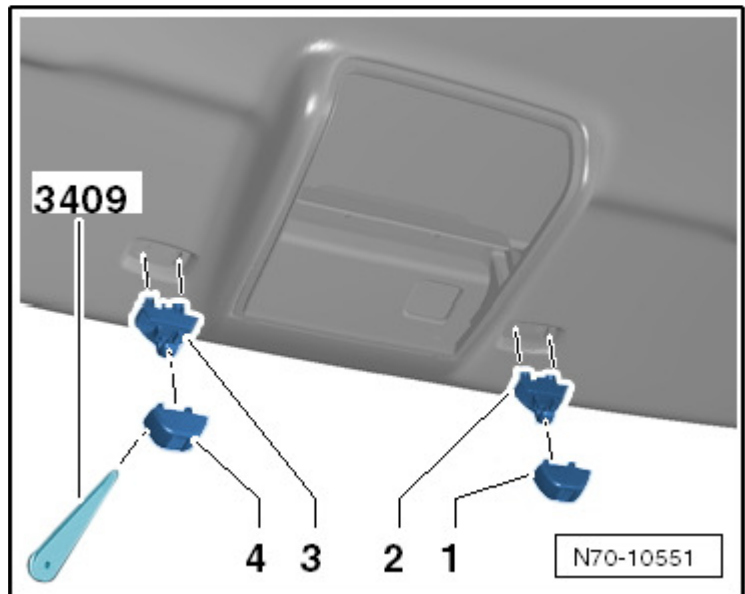

- Remove moulded headlining -1-, with help of second mechanic, from vehicle through rear lid.

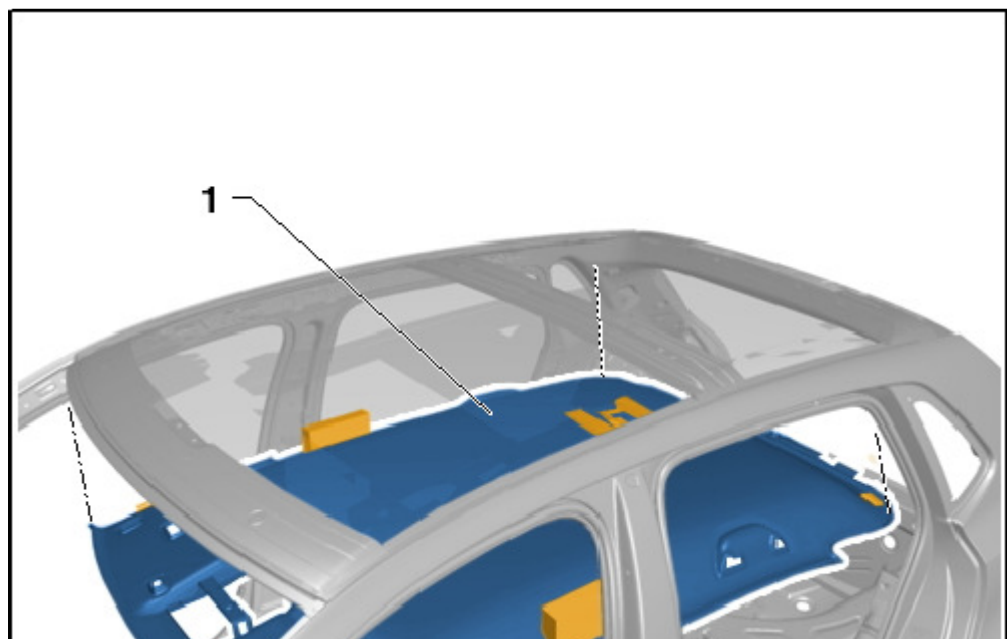

Installing

- Install in reverse order of removal.