

Removing and installing sun visors

Note


Removal and installation are described for right side of vehicle.
Follow same instructions for left side as appropriate.

Removing

- Switch off ignition.
- Unclip cover cap -2- using a small screwdriver.
- Carefully pull sun visor bearing -1- out of mounting.

Caution

Hold sun visor. Allowing the sun visor to hang on the wiring harness is not permitted!

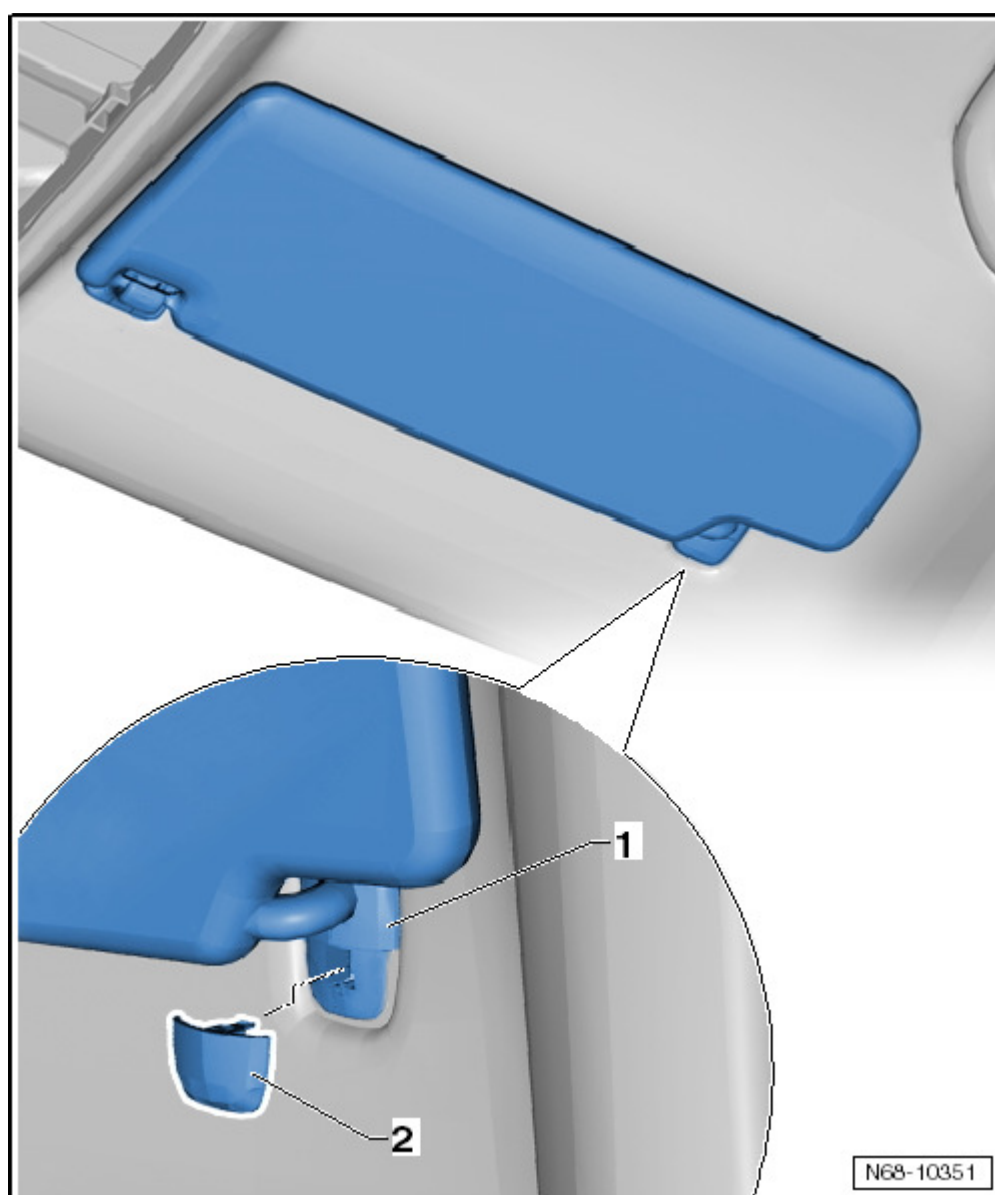

- Carefully disconnect connector -1- from sun visor -2- without pulling on flat cable.

Installing



Note

Before installing, check fasteners for damage and renew if necessary.

- Install in reverse order of removal.

