

Releasing and securing upper B-pillar trims (4-door models)

Note

Releasing and securing are described for the left side of the vehicle. Releasing and securing on the right side of the vehicle are similar.

- Pull lower end of trim -1- out of mountings -arrow A- and -arrow B-.
- Pull out trim from under moulded headliner.

Secure in reverse order of releasing.

Ensure seat belt is positioned correctly.

- Ensure that trim is positioned in beading of door seal.

