

## Removing and installing roof frame trim

### Removing

- Open rear lid.
- Pull roof frame trim -1- downwards out of mountings in roof cross member and out of bead of rear lid seal.

### Installing

- Install in reverse order of removal.



#### Note

*Before installing, check retaining clips for damage and renew if necessary.*

- Following installation, ensure that roof frame trim is positioned in rear lid seal beading.

