

Removing and installing lock cylinder

Removing:

- Carefully unclip the lock cover → **Item**.
- Insert key into lock (Pos. 1).
- Slacken the screw (Pos. 3) - 2.2 Nm by approx. three turns and press on it in order to release the lock. Then remove the screw completely.
- Slacken the screw (Pos. 2) so far until the lock cylinder can be pushed out of the door (turn the key in the lock by approx. 90 degrees).

Installing:

- Installation is carried out in the reverse order.

