

Removing and installing fog lights

Removing

- Switch off ignition.
- Versions equipped with ignition lock: Remove ignition key.
- Turn light switch to position “0”.
- Remove air intake grille → [General body repairs, exterior; Rep. gr.63.](#)
- Remove bolts -arrows-.
- Remove fog light -1- from bumper cover.
- Unplug electrical connector.

Installing

Installation is carried out in the reverse order; note the following:

- Adjust fog lights → [Chapter](#).

Tightening torques

- ◆ → [Chapter „Exploded view - fog light“](#)

