


Removing and installing centre console


Removing

- Remove insert for centre console → [Chapter](#).
- Remove centre console cover → [Chapter](#).
- Equipment version with vent: Remove air duct for rear vent → [Heating, air conditioning; Rep. gr.87](#).
- Equipment version with connection for external audio sources: Remove USB connection holder -R193-/connection for external audio sources -R199- → [Communication; Rep. gr.91](#).
- Unplug electrical connectors.

- Prise off cap -1- with a screwdriver.
- Unscrew bolt for centre console (underneath cap).

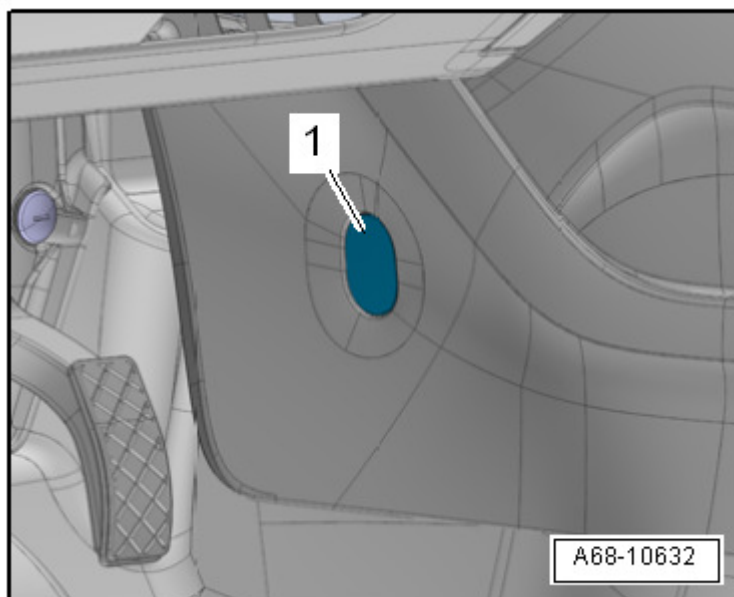

- Unscrew bolts -1 and 2- (centre).

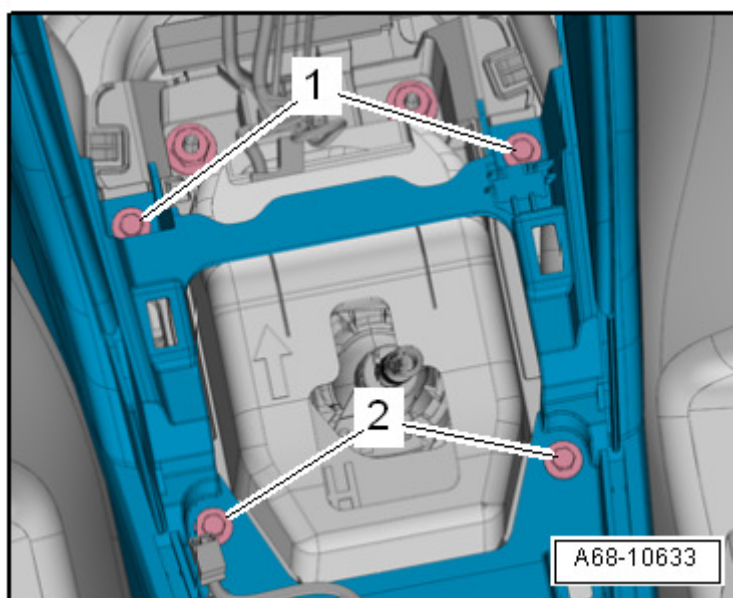


- Remove bolts -arrows-.



Note

Equipment version without centre armrest: 2 bolts.

- Lift centre console, pull it out of dash panel towards rear and remove by lifting it over selector lever/gear lever.

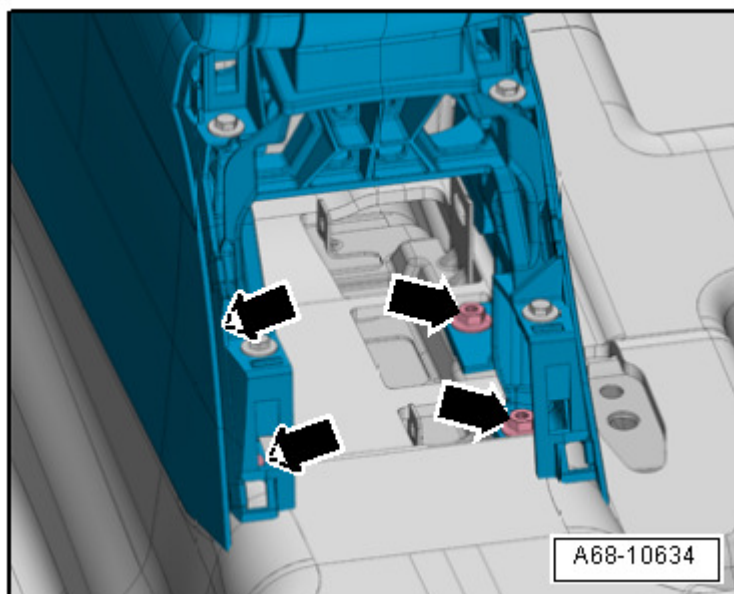

Installing

Installation is carried out in the reverse order; note the following:

- Make sure that all felt strips -1, 2 and 3- are correctly fitted at sides and top, and that cap -4- is fitted at front on centring pin.
- Fit centre console in position and guide electrical connectors through opening in centre console.

Notes for installation: tightening torques, renewing components etc.

→ [Chapter „Exploded view - centre console“](#)

