

Removing and installing centre console cover, rear (convenience equipment version)

Removing

- Move front seats as far forwards as they will go.
- Remove storage compartment (rear) → [Chapter](#).

Reach underneath cover -1- with

- your hand and pull cover towards rear out of centre console - arrows A-.
- Pull cover out of centre console at top -arrow B- and detach cover.

Installing

Install in reverse order of removal.

Notes for installation: tightening torques, renewing components etc.

→ [Chapter „Exploded view - centre console“](#)

