

Removing and installing selector lever position display -Y26-

Removing

- Pull up selector lever boot and turn inside out →[Rep. gr.34](#).
- Release retaining spring -2- and pull off selector lever position display -1- upwards -arrow-.
- Unplug electrical connector -3-.

Installing

Install in reverse order.

